

LAUFEN CLEANET RIVA

QUICK START GUIDE



LAUFEN

SAFETY AND WARNING NOTICES

Intended use

The Laufen shower toilet is designed to wash the rear area and also the female intimate area with the lady shower. Any other kind of use is not permitted. Glowing cigarettes or other burning objects must not be thrown into the WC bowl. Laufen shall not accept liability for damage that occurs as a result of connecting the appliance incorrectly, misuse or inappropriate use.

Persons with physical, sensory or mental disabilities as well as persons who are completely unfamiliar with the appliance (especially children) may only use the shower toilet under the supervision or instruction of a responsible person.

Warning notices/precautions (your safety)

Never operate a faulty appliance or an appliance with a damaged supply pipe. Only connect the appliance to the voltages specified in the operating manual. For further information, see section 13 in the operating manual (www.laufen-cleanet.com), Laufen Cleanet Riva technical data.

Check all functions regularly to ensure they work normally. Should you have any suspicion that the appliance is faulty, disconnect it immediately from the power supply and contact Laufen customer services.

Do not attempt to open or repair the appliance yourself. Do not install any additional components or make any modifications. The appliance contains live components. Opening the appliance can be extremely dangerous!

Unprofessionally performed repairs can cause dangerous accidents, malfunctions or damage to the appliance and installation. Repairs must therefore always be performed by trained and authorised personnel using original spare parts and accessories.

Only original materials for electrical and water connections as well as original spare parts may be used.

In the event of an appliance malfunction or repair order, follow the instructions in section 11, Troubleshooting. If necessary, contact Laufen customer services. Every person feels temperatures differently. You should therefore check the water temperature setting before using the shower toilet.

As a user or owner, you may only maintain or operate the appliance as described in the instructions which can be found online at www.laufen-cleanet.com

Always use drinking water to operate your Laufen shower toilet. Do not use rainwater, grey water or demineralised water.

Always use original Laufen products or products recommended by Laufen for cleaning, care and decalcification tasks. We do not accept liability for the use of other products.



Thermal cleaning is performed using hot water: Caution, risk of scalding!
Do not sit on the shower toilet during thermal cleaning.

Visit www.laufen-cleanet.com to view the Declaration of Conformity

OVERVIEW



Menu



Basic profile



User profile 1



User profile 2



User profile 3



User profile 4



Save



Rear shower



Lady shower



Power shower



Stop



LED display



Service information



Odour extraction



Replacing the odour filter



Increase spray intensity



Reduce spray intensity



Increase spray temperature



Reduce spray temperature



Oscillation



Pulsation



Increase spray time



Reduce spray time



Extend spray arm



Retract spray arm



Confirm



Cancel



Continue



Back



Increase



Reduce



General settings



Information



Help



Spray settings



Language



Water hardness



Thermal cleaning



Decalcification



Factory settings



Reset



Demo



Disassembling ceramic piece


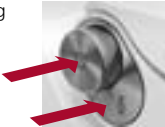

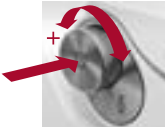


CONTROLLER WITH ROTARY BUTTON

The following functions can be activated using the controller:



Controller with rotary button



	Remote control	Description
User profile selection		You can select 4 stored user profiles by turning the controller. One indent forward selects user profile 1. The second indent selects user profile 2, etc. One indent back reduces the user profile by one in each case. If you do not select a user profile, the basic profile is activated automatically.
Starting and stopping the shower		While you are sitting on the shower toilet, briefly press the rotary button on the right side to start the rear shower. Press the separate button underneath the rotary button to start the lady shower. A further press stops showering prematurely.
Spray intensity		One turn forwards increases the jet intensity during the rear and lady shower. One turn back reduces the jet intensity.
Shower jet position		The position of the shower jet can be changed by pressing the controller and simultaneously turning it forwards or backwards. The shower arm follows the direction of rotation.

REMOTE CONTROL

Activate the touch screen remote control by pressing the start button at the top right. When the remote control is activated for the first time, a setup program guides you through the most important settings. The sanitary technician may have already commissioned the WC after installation. As soon as you sit on the shower toilet, the appliance can be operated using the rotary button or remote control.

	Remote	Description
Black symbol		Function is inactive/not in use.
White symbol		Function is active/in use.

STARTING APPLIANCE


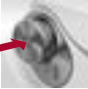













As soon as you sit on the Laufen shower toilet, the odour extraction is activated. It can be switched off at any time using the remote control.

	Description
Odour extraction	

REAR SHOWER AND LADY SHOWER

After visiting the WC, you can start the rear shower via the respective symbol on the remote control or by a brief press on the controller.

The lady shower enables natural cleansing of the vaginal area. This is either triggered by pressing the respective symbol on the remote control or by a press on the separate button underneath the rotary button.





	Remote control	Controller
Rear shower		
Lady-Shower		
Stop		
Increase spray intensity		
Reduce spray intensity		
Extend spray arm		
Retract spray arm		
Power shower		press and hold down

LED DISPLAY

The LED display light underneath the appliance throws light on the floor. It offers orientation when visiting the WC during the night and notifies you of required maintenance or possible malfunctions on your shower toilet.





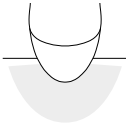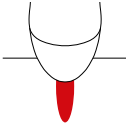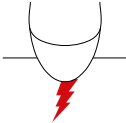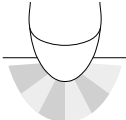


LED display

	LED display	Information	Description
White		Normal operation	Everything functioning correctly.
Red		Care notice	Please activate the remote control for further information.
Red flashing		Fault indication	Please contact our service hotline and have your remote control ready for further instruction.
Alternate white flashing		Care program active	If the white LED display light flashes alternately, decalcification or thermal cleaning is active.

USER PROFILES


The Laufen shower toilet allows you to save four individual user profiles. Press "Shower settings". The settings for the rear shower appear first.

	Remote control
Shower settings	
Rear shower	
Lady shower	
Save	

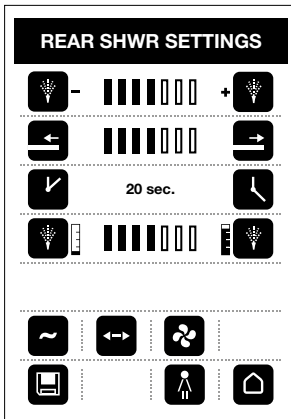

You can adjust the jet intensity, the position of the shower jet, the duration and temperature of the shower according to your personal requirements in this menu. You can also activate or deactivate the pulsating and oscillating function as well as the odour extraction extraction.

You access the "Lady shower settings" menu by pressing the respective symbol. You can adjust the jet intensity, the position of the shower jet and the shower duration here. You can also activate or deactivate the pulsating and oscillating function. The settings for shower temperature and odour extraction are identical to the settings of the rear shower.

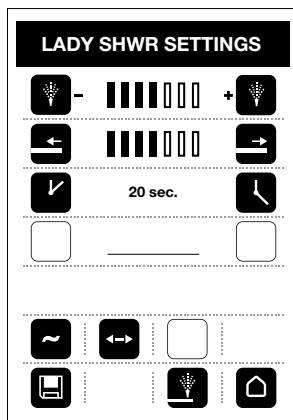

	Remote control
Basic profile	
User profile 1	
User profile 2	
User profile 3	
User profile 4	

After selecting your personal settings, you can save the changes you made. Press "Save" and select one of the 4 user profiles (I – IIII) or the basic profile (0).

MAINTENANCE AND CLEANING



IMPORTANT CLEANING INSTRUCTIONS



Avoid using powdery, corrosive, concentrated chlorinated and abrasive cleaning agents and abrasive sponges, steel wool and steel cleaners.

REMOVE THE SEAT AND COVER

The seat and cover unit can be removed to make the shower toilet easier to clean. Simply lift the seat and cover to a vertical position (about 85° in relation to the ceramic surface) and pull both parts from the hinge.




MAINTENANCE

	Remote Control	Description
Thermal cleaning		Thermal cleaning flushes the entire water-carrying system on your shower toilet with hot water to eliminate bacteria and germs. An illuminated red LED display on the appliance and corresponding service information on the remote control inform you that thermal cleaning is due. Corresponding instructions on the remote control will guide you through the program.
Decalcification		The decalcification program descales all parts that carry water. Press "Decalcification" to open the menu. An illuminated red LED display on the appliance and corresponding service information on the remote control inform you that decalcification is due. Corresponding instructions on the remote control will guide you through the program. Please always use original Laufen descaling agent.



MEASURE THE WATER HARDNESS

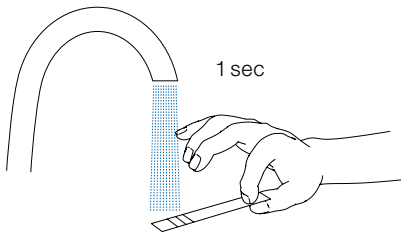


- Measure the water hardness at the place of installation using the enclosed test strip.
- Hold the test strip in tap water for 1 second.
- Shake the test strip and wait 60 seconds.
- Compare the colour of the test strip with the table below.

Measured water hardness	Setting on the appliance
	< 15 °fH, < 8,4 °dH
	< 15 °fH, < 8,4 °dH
	15–25 °fH, 8,4–14 °dH
	25–35 °fH, 14–19,7 °dH
	> 35 °fH, > 19,7 °dH
	> 35 °fH, > 19,7 °dH

SAVE THE WATER HARDNESS

The sanitary technician may have already commissioned the settings during the remote control setup.

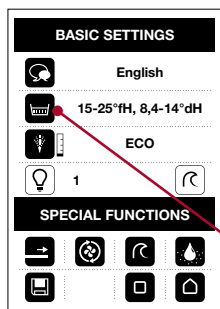

Activate the touch screen remote control by pressing the start button at the top right. Press "General settings" to access the default settings. Select the measured water hardness by pressing the "Water hardness" symbol repeatedly. The following ranges are available for selection:

< 15 °fH, < 8,4 °dH; 15–25 °fH, 8,4–14 °dH;
25–35 °fH, 14–19,7 °dH; > 35 °fH, > 19,7 °d



Press "Save".

Press "Menu" to return to the main menu.

WARRANTY

The warranty conditions for RIVA can be found at:
www.laufen-cleanet.com

All further information on the operation of your
Laufen shower WC can be found online at:

WWW.LAUFEN-CLEANET.COM